 


TECHNICAL SPECIFICATIONS

Case material	Metal
Emergency duration	3 h
Wattage (AC)	<8,5W
Voltage	230V 50Hz
Protection category	IP 20
Insulation class	I
Battery	NiCd or NiMH 6V 4,5Ah/7,0Ah
Permissible temp.	0°C - 55°C
Weight	0,2 kg (not incl. battery)
Dimensions	235 x 29,5 x 22 mm



	6V 4,5Ah	6V 7,0Ah
TS	8W, 11W, 14W	21W, 24W, 28W, 39W, 54W
TS	18W	36W, 58W
PL-L	18W, 24W	36W, 40W
PL-C	13W, 18W	26W
PL-T	18W	26W, 32W, 42W

AUTOMATIC TEST SYSTEM (ATS)

20 h after applying mains voltage a **functional test** is automatically run (30 sec., items checked: changeover and lamp). After a further 4 h, an automatic 3 h **duration test** is run. (If the test button is pressed for 5 sec. before the duration test has ended, the operation duration test is aborted.) Following the first duration test, regardless of whether or not this was passed, the weekly cycle of functional test and yearly cycle of duration test are automatically started.

Test button	Green LED	Status
Press for about 1 s	OFF	Emergency mode for 1 second
Press for about 3 s	Blinking	Functional test for 30 seconds.
Press for about 5 s	Flashing	Duration test
Press again for about 5 s		Interruption of duration test

Meaning of the indicator LED

Mains operation No fault	Duration test failed
Blinking Functional test	Blinking Lamp / changeover fault
Flashing Duration test	Flashing Battery / charging fault
Mains failure + Emergency light operation	

The status display can only be cleared after the fault has been rectified, mains voltage has been reapplied and a functional test has been run.

Test button

Press for about 1 s
 Press for about 3 s
 Press for about 5 s
 Press again for about 5 s








Green LED

OFF
 Blinking
 Flashing

Status

Emergency mode for 1 second
 Functional test for 30 seconds.
 Duration test
 Interruption of duration test

Meaning of the indicator LED

 Mains operation No fault	 Duration test failed
 Blinking Functional test	 Blinking Lamp / changeover fault
 Flashing Duration test	 Flashing Battery / charging fault
 Mains failure + Emergency light operation	

The status display can only be cleared after the fault has been rectified, mains voltage has been reapplied and a functional test has been run.